

# SEASIDE CASUAL FURNITURE

## ENVIRO WOOD

### (11,19) Adirondack Classic & Shellback Rockers rev. A

#### Parts List:

- (1) Seat Assembly
- (1) Back Assembly
- (2) Front Rocker Legs
- (2) Arms



#### Hardware List:

- (12) 3-1/2" Connector Bolts
- (2) 2-3/4" Connector Bolts
- (14) Flat Washers
- (14) Lock Washers
- (14) Nuts
- (4) 1-3/4" Phillip's Head Screws

#### Tools Required:

- Philip's Head Screwdriver
- 7/16 Socket or Wrench
- (1) 4MM Allen Wrench (Included)

### Assembly Instructions

#### Step One: Set Up

**READ ENTIRE INSTRUCTIONS BEFORE BEGINNING!** Carefully remove contents from box. Make sure that all parts and hardware are included.

#### Step Two: Leg Assembly

Place Seat Assembly on it's side on a flat clean surface. Locate the Front Leg with Rocker that you will be installing (Right Picture). Insert a 3-1/2" connector bolt up through the outermost pre-drilled hole in front leg and align this with the pre-drilled hole in the seat assembly and install the flat washer, lock washer, & nut. Finger tighten nut, then install second and third 3-1/2" connector bolts next to the one you have just installed. Install (2) 3-1/2" connector bolts to attach back of Rocker to Rear Leg (Right Picture). Flip the chair over and repeat process for the other side. Do not tighten at this time.




#### Step Three: Arm Assembly



Arms should be installed with curve side on the inside of the chair (Left Picture). Place Arm on top of Front Leg. Align pre-drilled hole in arm with the pre-drilled hole located at the top of the Front Leg. Install a 3-1/2" connector bolt through pre-drilled hole in Front Leg, then through pre-drilled hole under arm. Install flat washer, lock washer, and nut. Do not tighten at this time. Repeat process on other side.

### **Step Four: Arm & Back Attachment**

Install (1) 2-3/4" connector bolt through pre-drilled hole through arm and through upper back yoke (Right Picture). Finger tighten flat & lock washers and nuts. Do not tighten at this time. Repeat process for opposite side.

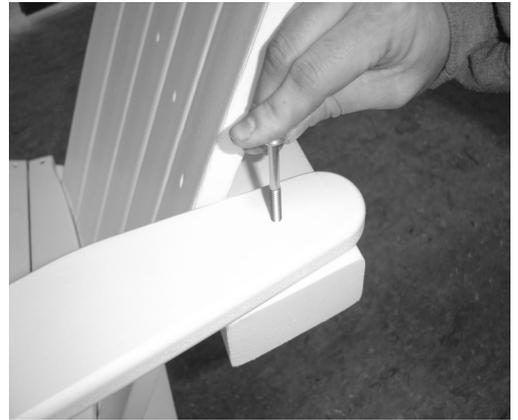

### **Step Five: Back Assembly**



Place Seat Assembly on top of mounting surface of Rear Legs (Left Picture). Push Back Assembly forward until it's aligned with Seat Assembly. Hold Back Assembly in place and install (4) 1-3/4" Phillip's Head Screws into pre-drilled holes on each side.

### **Step Six: Tightening of Hardware**

Tighten all connections. **Do not over tighten!!! Over tightening of hardware can cause damage to the item.**